


MOCCAMASTER KM5 GRINDER

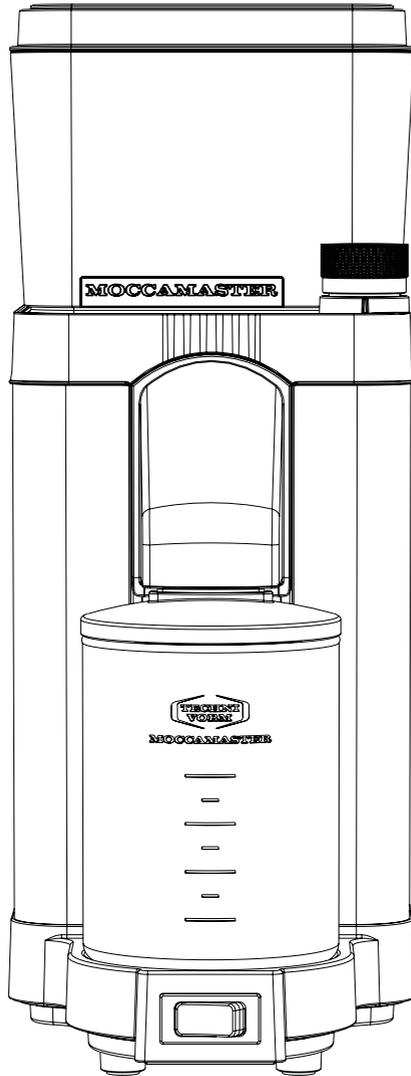

Instruction Manual

IMPORTANT SAFETY MEASURES

WHEN USING ELECTRICAL APPLIANCES, THE SAFETY INSTRUCTIONS SHOULD BE FOLLOWED AT ALL TIMES.


READ ALL THE INSTRUCTIONS BEFORE USE!

- Unwrap the coffee grinder with care and remove all packaging materials. Keep the packaging (plastic bags and cardboard) out of reach of children.
- The appliance is intended for use in households and similar applications such as:
 - » staff kitchen areas in shops, offices and other working environments.
 - » farmhouses.
 - » by clients in hotels, motels and other residential-type environments.
 - » bed & breakfast-type environments.
- The appliance must be used indoors only .
- To protect against fire, electrical shock and injury to persons do not immerse coffee grinder, cord or plugs in water or other liquid.
- Check to see if the voltage of the machine matches your mains voltage.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.

- Avoid contacting moving parts
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- Do not use accessory attachments not recommended by the appliance manufacturer as this may result in fire, electric shock or injury of persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter where it can be pulled on by children.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, make sure the switch is in the "off" position, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always place the lid and receptacle in the correct position as described in this manual before use.
- Conform to the maximum consecutive grinding time stated in this manual and allow the grinder to cool down to room temperature after each batch.


KEEP THESE INSTRUCTIONS!

PRODUCT OVERVIEW

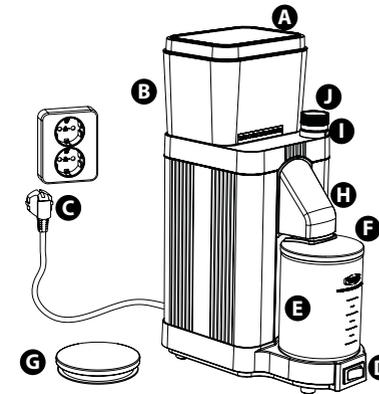

- A. Bean Hopper Lid
- B. Bean Hopper
- C. Power Plug
- D. Power Switch
- E. Grounds Container
- F. Grounds Container Lid
- G. Grounds Container Storage Lid
- H. Dispensing Spout
- I. Grind Setting Indicator
- J. Grind Setting Adjustment Knob

KM5 GRINDING GUIDE

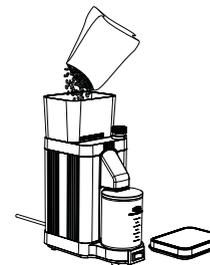

- STEP 1.**
Place Grounds Container Lid (F) in position.
Place Grounds Container (E) underneath the Dispensing Spout (H).
Fill Hopper (B) with coffee beans.
Place Hopper Lid (A) on top of the hopper.

MAXIMUM OPERATION TIME AND GROUNDS CONTAINER CAPACITY


Please conform to the maximum consecutive grinding time stated below and allow the grinder to cool down to room temperature after each batch.

 **MAX 60 sec. ON**


 **15 min. OFF**

Do not overfill the Grounds Container as this can cause the motor to jam.


 **MAX**

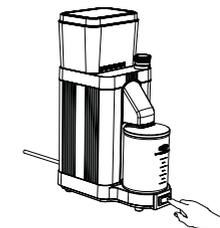

- STEP 2.**
Plug into a grounded outlet.
Press and hold the Power Switch (D) until you have ground the desired amount of coffee.

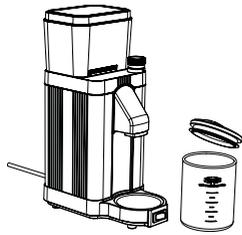

STEP 3.
Remove the Grounds Container from underneath the Dispensing Spout and remove the Lid.

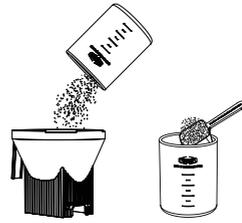


STEP 4.
Pour ground coffee from the Grounds Container directly into your prepared brew basket or coffee brewer, or measure your grounds first.


ADJUSTING YOUR GRIND SETTINGS

Getting started

For first use, set the adjustment knob to 5. On subsequent use, always activate the power switch before adjusting the grind setting. This allows the burrs to clear any partially ground beans that may be present from previous use. If bean remnants are trapped in the burrs, adjusting the grind setting without activating the grinder may cause the motor to jam.

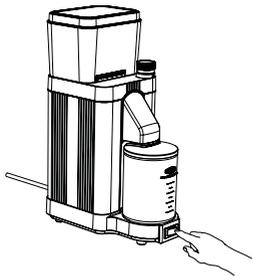


STEP 1.
Activate the grinder by holding the Power Switch (D).

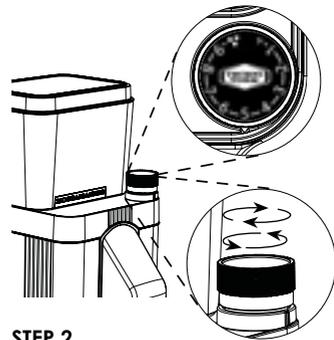

STEP 2.
With the grinder running, adjust the grind setting by rotating the Adjustment Knob (J) clockwise or counterclockwise. Turning the knob clockwise will produce a finer grind. Turning the knob counterclockwise will produce a coarser grind.

Grind setting details

The adjustment knob on the KM5 Coffee Grinder allows you to produce coffee grounds that range from fine (1) to coarse (9). When grinding for a Moccamaster coffee brewer, we recommend starting at the ECBC-approved setting of 5. We suggest not grinding below 5 for your Moccamaster as a finer grind size may negatively affect the flavor of your brew and the performance of your machine.

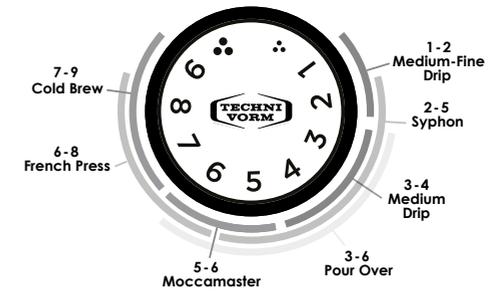

CLEANING THE GRINDER

Basic Cleaning

Make sure to unplug the grinder before cleaning. Wipe the inside surfaces of the bean hopper with a moist cloth at least once a week to avoid a buildup of the coffee oils, which can cause discoloration. When needed, you may also clean the exterior surfaces with a moist cloth, wiping dry. Do not use any cleaning agents to clean the interior or exterior of the coffee grinder. Do not wash any grinder parts in the dishwasher. Do NOT use rice to clean your grinder.

Maintenance Cleaning

We recommend cleaning the inside of your grinder every 3-6 months, depending on how frequently you grind coffee and the type of coffee you're using. Darker roasts are typically oilier and tend to stick to the inside of the grinder more easily. If you do not clean your grinder regularly, you may find that it negatively impacts the flavor of your ground coffee.

The inside of your grinder can either be cleaned manually or automatically by using a dedicated coffee grinder cleaning product.

SERVICE AND WARRANTY

Parts

To order parts, contact your supplier or order from www.moccamaster.eu

Service and repairs

Contact your local dealer or info@moccamaster.eu for service and repairs.

Warranty

The warranty is valid for five (5) years from the date of purchase. Keep the original sales receipt. Repairs during these 5 years do not extend the warranty period, which remains valid from the date of original purchase. The warranty covers defects and faulty components which are related to material and production faults.

The following are not covered by the warranty

1. Normal wear and tear and damage through use; scratches, dents and damage caused by falls, collisions, etc.
2. The use of the product for purposes other than grinding coffee.
3. Loose parts such as catch bin and lids.
4. Modifications carried out by or on behalf of the customer.
5. Damages caused by e.g. stones.
6. Damage caused by incorrect positioning, use other than for grinding coffee, connecting the appliance to the wrong mains voltage, damage caused by chemical agents, corrosion or abnormal environmental influences.
7. If an official service technician is not able to identify faults in the product, the cost of repair will not be reimbursed. If repairs or modifications are carried out by a non-official service workshop or if non-original parts are used, the warranty is automatically void.